

Donatello OVEN

Pre-installation and installation manual

DN 635 DN 635 L DN 935





Introduction

This oven has been designed with the utmost care and undergone rigorous tests in our laboratories and for this reason we guarantee its absolute safety and functionality.

The installation must be carried out by **professionally qualified** staff, that can take responsibility for the installation and guarantee the best safe operating conditions.

Before the installation, read the content of this manual **carefully**: it contains important information regarding product assembly and safety regulations.

Technical service

The Dealer can solve any technical problem regarding installation.

Do not hesitate to contact him in case of doubt.

CUPPONE 1963 Cuppone F.lli S.r.l. Via Sile, 36 31057 Silea (TV) - ITALY T +39 0422 361143 F +39 0422 360993 info@cuppone.com - www.cuppone.com

The company cannot be held liable for any print or transcription errors, reserving the right to make changes where deemed suitable without prior notice.

Partial reproduction without the Manufacturer's consent is prohibited. Measurements are purely indicative and not binding.

The original language used to prepare this manual is English: the Manufacturer is not responsible for any translation/interpretation or print errors.

Contents

CHECKS BEFORE PURCHASING	3
OVEN TECHNICAL DATA	6
Michelangelo DN 435 oven technical data	11 15
3 INSTALLATION	23
Transport	24 25 26 26 27 36 36

1 CHECKS BEFORE PURCHASING

Before purchasing the oven and before its installation, **check and agree with the owner** that, on installation, all the following conditions are met; they are indispensable for the correct and safe installation, operation and maintenance of the oven.

Check with the owner if in the place of installation there are the tools to handle the oven easily Fig. 1

- $\sqrt{}$ To handle the oven correctly, it is necessary to:
 - have personal protection equipment available (e.g. safety shoes, gloves, etc.)
 - have lifting equipment available that can handle the appliance safely (check weight and dimensions in the following pages), together with staff qualified to carry out this operation.


B Check the dimensions of the selected oven and accessories

1

- check that the dimensions of the selected oven are suitable to the available space in the installation room.
- check that the cooking chamber capacity is adequate to the owner's needs.



The "Technical data" section from page **6** contains the weights and dimensions of the cooking chamber.

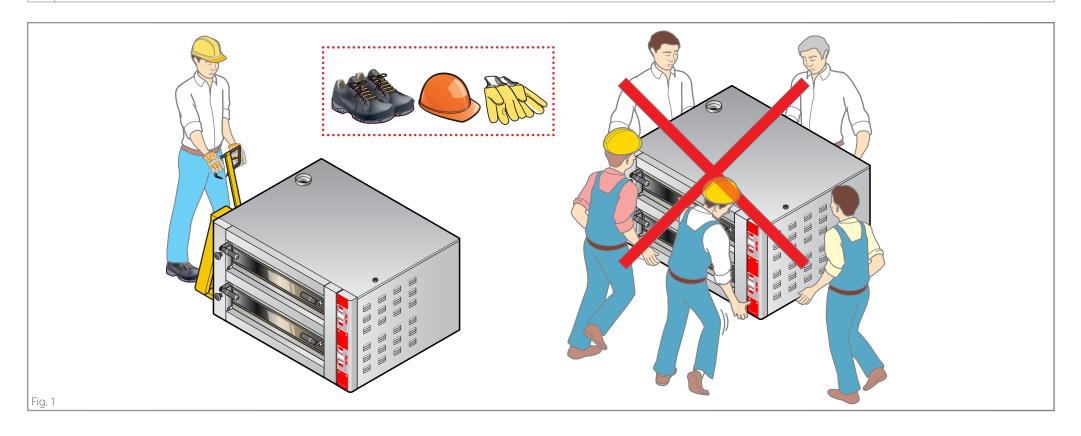

Checks before purchasing

- Survey the installation room to make sure it is adequate.
- Make sure that Fig. 2
 - · the floor of the installation room is fireproof. perfectly level and capable of withstanding the weight of the appliance;

Model	single	double	Mod.	single	double
DN435	147 kg - 324 lb	252 kg - 555,5 lb	DN635L	190 kg - 418,8 lb	324 kg - 714,2 lb
DN635	187 kg - 412,2 lb	330 kg - 727,5 lb	DN935	250 kg - 551,1 lb	430 kg - 948 lb

- The oven must be placed on a base, built by the Manufacturer or by yourself that:
- is flame and heat resistant:
- is perfectly stable and level;
- withstands the weight of the appliance.
- the installation room:
- is dedicated and suitable to cooking food;
- has adequate air ventilation;
- contains no flammable or explosive elements;
- complies with the current regulations on health and safety and systems in the workplace;
- is protected from the weather:
- has a maximum temperature of between +5° (41°F) and +35°C (95°F);
- has a maximum humidity of 70%.
- the appliance passes through the doorways easily.
- When choosing the positioning room, take into account that the appliance must be easy to move for any extraordinary maintenance: be careful that any brickwork after installation (e.g.: wall construction, replacement of a door with a narrower one, renovations, etc.) do not hamper movements.
- there are NO other sources of heat (i.e. grills, fryers, etc.), highly flammable substances or fuels (i.e. gasoline, petrol, bottles of alcohol, etc...) in the vicinity of the appliance.
- there is **adequate ventilation** according to the regulations in force in the Country of installation. If this is not the case, a Ø140 mm /Ø5.51 in. J air intake is mandatory, communicating with the outside or a ventilated room (i.e. storeroom, attic, garage, basement).

• it is possible to maintain a minimum distance between the oven and the walls, other equipment, objects and **combustible materials** Fig. 3 In case of hot or cold equipment, keep a distance of **500 mm** [19,7in.].



It is absolutely necessary to comply with the minimum stated safety distances. The distances must be increased in case of objects in heatsensitive materials.

• there is an **evacuation flue** for the exclusive use of the equipment, which complies with current regulations and which has a diameter that allows the passage of an evacuation tube of **150 mm** [5.91 in.].



The oven is equipped with an adjustable smoke outlet located at the top for the evacuation of the vapours from the cooking chamber (you can find its exact position in the "Technical data" section starting on page 6).

This steam, together with the one from the door during the work phases, must be conveyed outside in one of the following ways:

- through a hood supplied by the Manufacturer that ensures perfect compatibility with the oven. For correct assembly and fixing to the oven, see the sheet attached to it; the evacuation flue must be for the exclusive use of the appliance, comply with current regulations and have a diameter that allows the passage of a Ø**150 mm** [5.91 in.] evacuation pipe which corresponds to the diameter of the tube to be mounted on the hood (not supplied).
- through a **hood** belonging to the user, of suitable capacity, placed at about 300 mm [11,81 in.] from the oven:
- through an adequate extraction system supplied by the user connected to the oven flue: in this case a draught switch must be installed between the extractor and the oven chimney (the extractor and switch are not supplied by the Manufacturer). In this type of installation, the fumes resulting from the opening of the door will not be extracted.


- Inform the owner about the necessary electrical arrangements (activities to be carried out by a qualified electrician)
- For a correct connection Fig. 2:
 - provide sockets connecting to the electrical network near the oven. If the oven has a double chamber. there must be two connecting sockets.




The "Technical data" section from page 6 contains all the electrical data as well as the positions of the supply cable and equipotential terminal.

- use a connection cable (A) and a plug (B): appliances are supplied without either power cable or plug: they must both be fitted by qualified personnel. The cable must be only of the type stated and the plug fitted to it must be suitable for the consumption and connection of the oven to the electrical mains.
- check that the systems in the room comply with the legal provisions in force in the country of use and meet the specifications on the serial number plate. For a correct electrical connection, the appliance must:
- be included in an **equipotential system** in compliance with the legislation in force. This connection must be made between the various devices with the terminal marked with the equipotential symbol 🔯 . The cable must have a maximum cross-section of 10 mm2 (in compliance with IEC EN 60335-2-42:2003-09) and must be yellow-green;
- must be **grounded** (a) to the mains (green-yellow wire):
- must be connected to a thermal differential **switch** in compliance with the regulations in force (0.03A A type):
- must be connected to an omnipolar circuit breaker allowing complete disconnection in overvoltage III category conditions.

Checks before purchasing

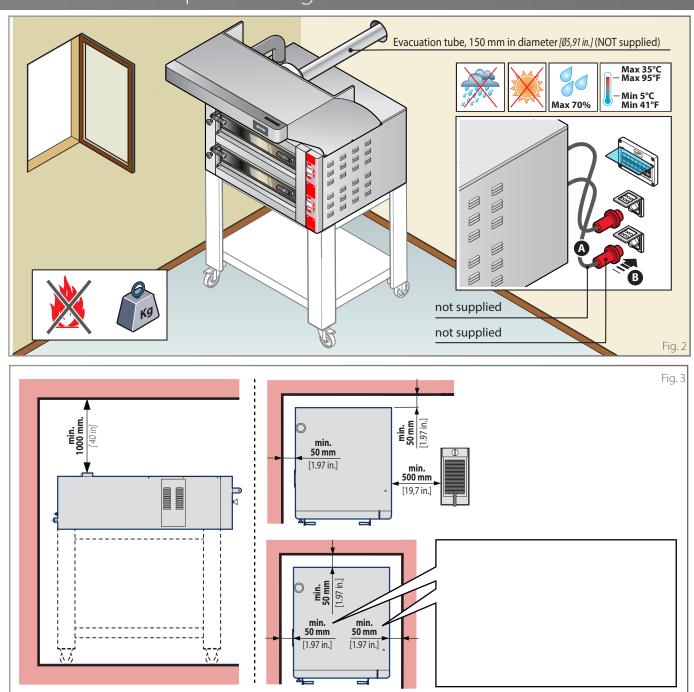

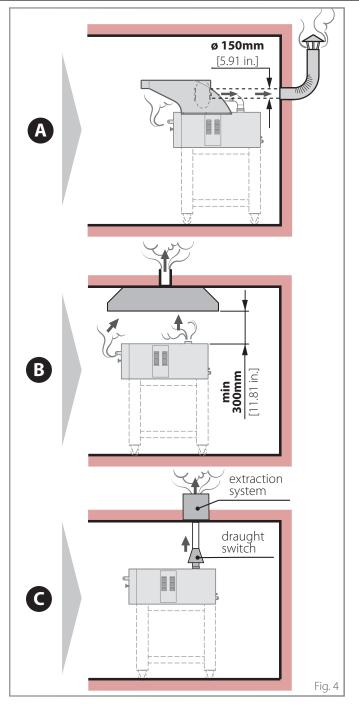


Electrical data

Oven type	Supply V	Power kW	Average consumption kWh	Absorption A	Cable type	Customer panel prot.
	single-phase 230V			25.2	H07RN-F 3G4	2x32
425	three-phase 400V	5.8	3.5	8.4	H07RN-F 5G1	4x16
435	three-phase 230V			14.6	H07RN-F 4G1,5	3x16
	three-phase 208V	5.8	3.5	16.1	15/4 SOOW CABLE	3x16
	three-phase 400V	8.4	5.0	12.1	H07RN-F 5G1,5	4x16
635	three-phase 230V			21.1	H07RN-F 4G2,5	3x25
	three-phase 208V	8.5	5.1	23.6	13/4 SOOW CABLE	3x25
	three-phase 400V	8.6	5.2	12.4	H07RN-F 5G1,5	4x16
635L	three-phase 230V			21.6	H07RN-F 4G2,5	3x25
	three-phase 208V	8.6	5.2	23.9	13/4 SOOW CABLE	3x25
	three-phase 400V	12.6	7.6	18.2	H07RN-F 5G2,5	4x20
935	three-phase 230V	12.6	7.6	31.6	H07RN-F 4G4	3x32
	three-phase 208V	12.8	7.7	35.5	9/4 SOOW CABL <u>E</u>	3x40


Key


- (A) Oven door
- B) Oven smoke exhaust
- C Control panel
- D Panel to access electrical components
- E Circuit breaker (only USA models)
- (F) Equipotential
- G Oven supply input
- (H) Hood supply input

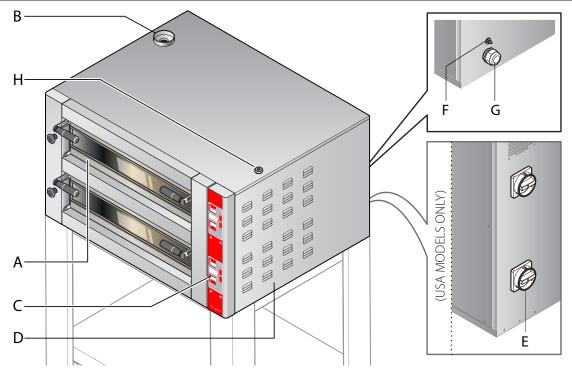



^{*} Caution: the values stated refer to one oven chamber. Double ovens have 2 inlets and therefore 2 different lines


Donatello DN 435 oven technical data | single

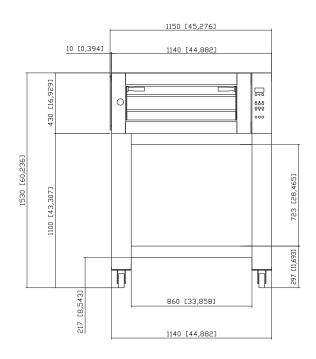

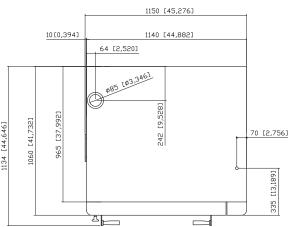


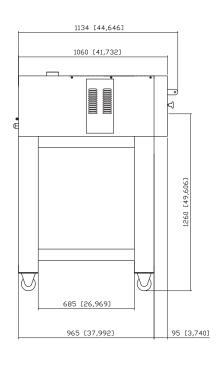


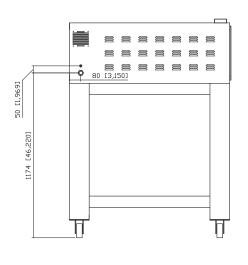


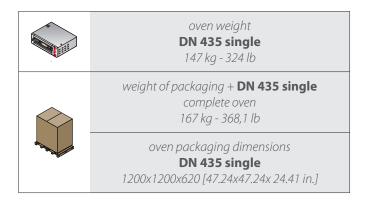



Donatello DN 435 oven technical data | double

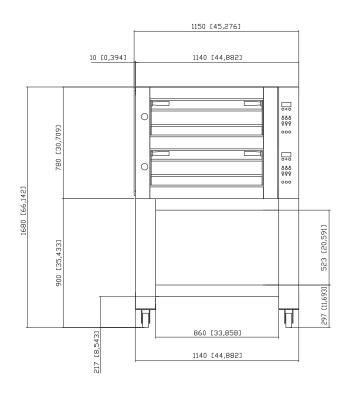

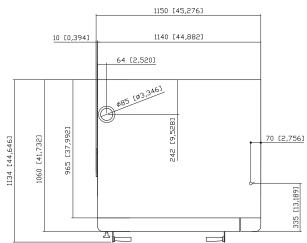


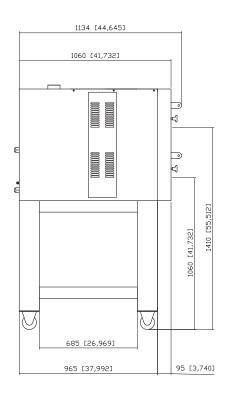


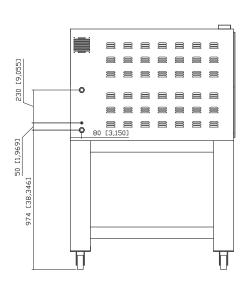


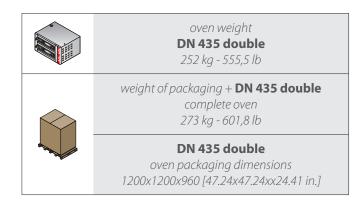


Donatello DN 435 oven technical data | triple

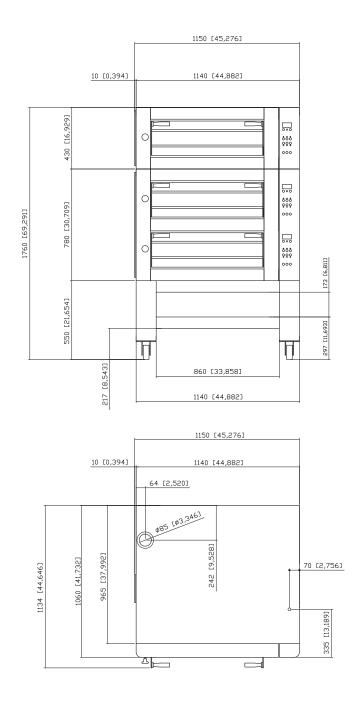


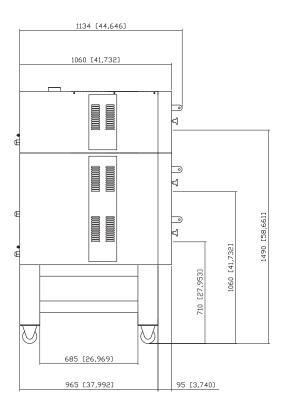


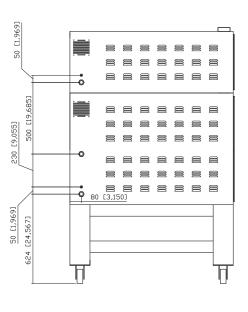


Donatello DN 435 oven technical data | capacity

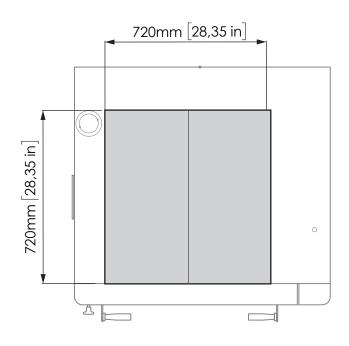

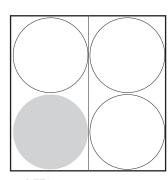

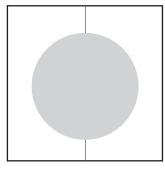

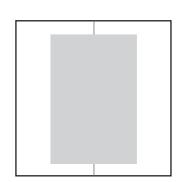

PIZZA **Ø 35 cm** [Ø 13.78 in.]

PIZZA **Ø 50 cm** [Ø 19,69 in.]


TRY **60x40 cm** [23,62x15,75 in.]

Ø PIZZAS	PRODUCTIVITY PER HOUR	BATCHES
Ø 35 cm [Ø 13.78 in.]	40-44 pizzas	10-11
Ø 50 cm [Ø 19.69 in.]	10-11 pizzas	10-11
60x40 cm [23,62x15,75 in.]	5-6 pizzas	5-6


chamber height: 140 mm [5,51 in.]


ALIGNMENT OF THE OVEN WITH THE SUPPORT


If the Donatello oven is to be placed on a support, make the oven rear corners match the rear corners of the support.

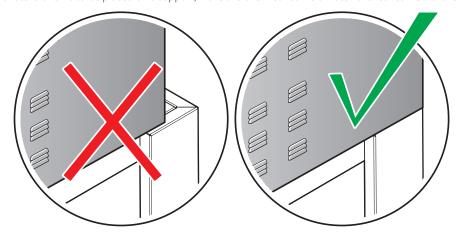


Donatello DN 635 oven technical data | single

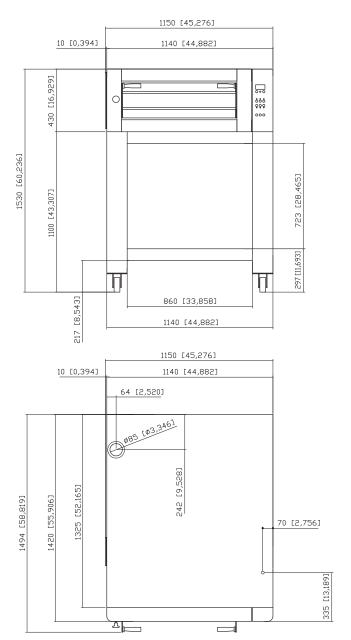


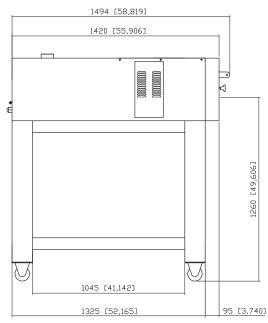


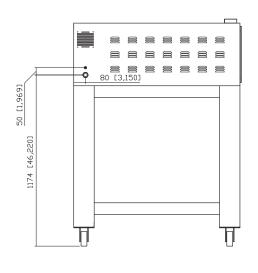


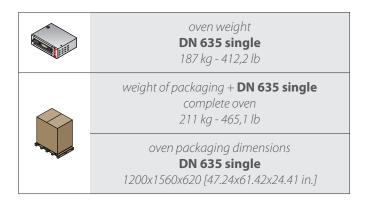


Donatello DN 635 oven technical data | double

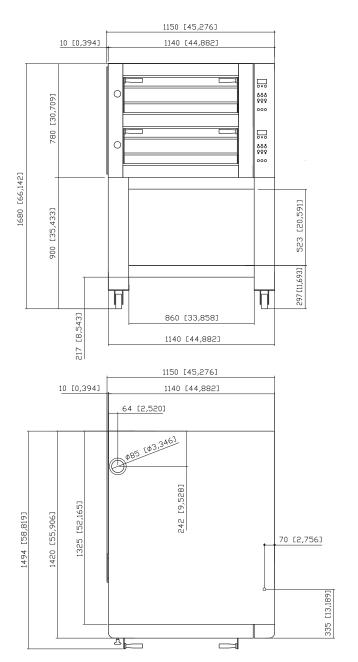


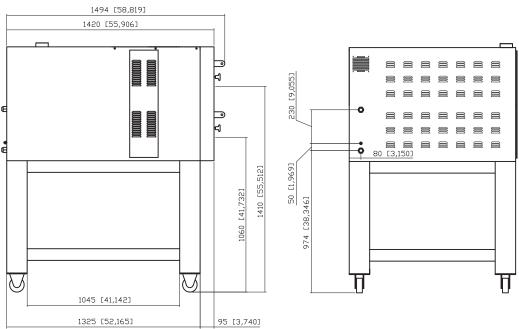


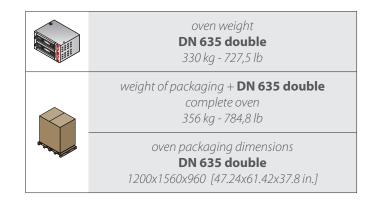


Donatello DN 635 oven technical data | triple

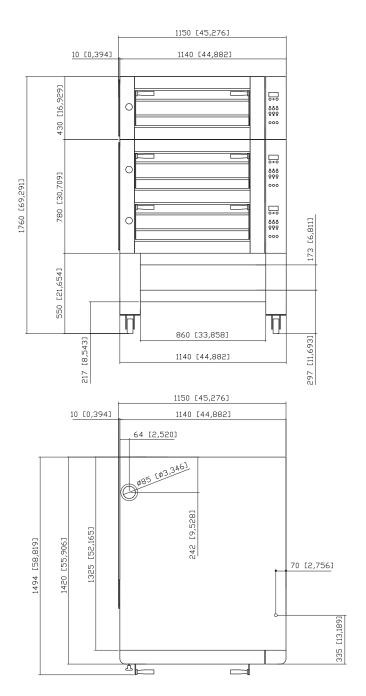


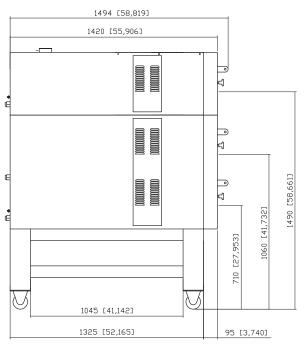


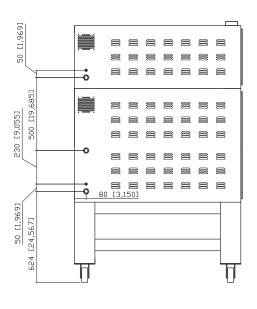


Donatello DN 635 oven technical data | capacity

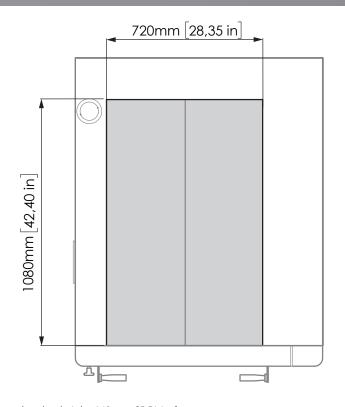

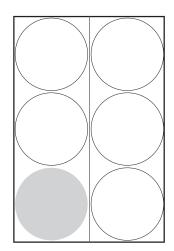

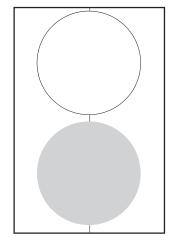

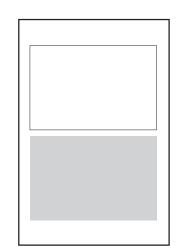

PIZZA **Ø 35 cm** [Ø 13.78 in.]

PIZZA **Ø 50 cm** [Ø 19,69 in.]


TRY **60x40 cm** [23,62x15,75 in.]

	Ø PIZZAS	PRODUCTIVITY PER HOUR	BATCHES
0	Ø 35 cm [Ø 13.78 in.]	60-66 pizzas	10-11
	Ø 50 cm [Ø 19.69 in.]	20-22 pizzas	10-11
	60x40 cm [23,62x15,75 in.]	10-12 pizzas	5-6


chamber height: 140 mm [5,51 in.]


ALIGNMENT OF THE OVEN WITH THE SUPPORT


If the Donatello oven is to be placed on a support, make the oven rear corners match the rear corners of the support.

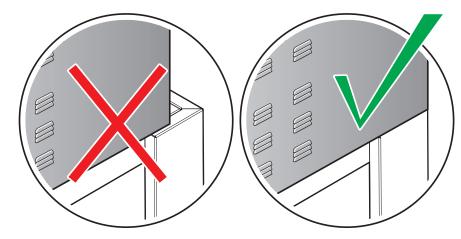



Donatello DN 635L oven technical data | single

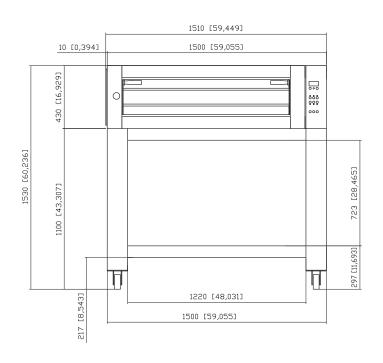

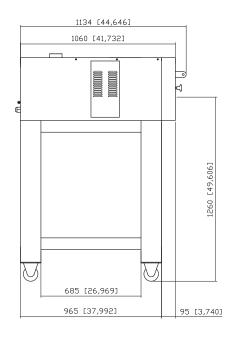


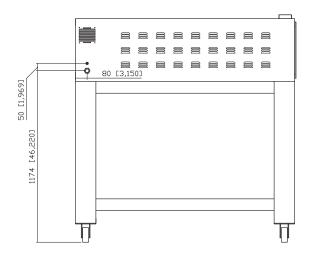


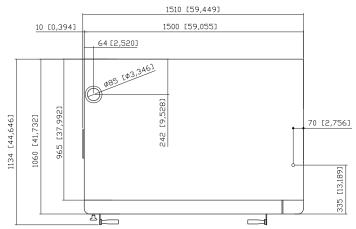


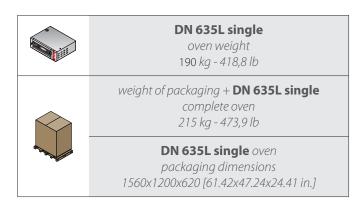


Donatello DN 635L oven technical data | double

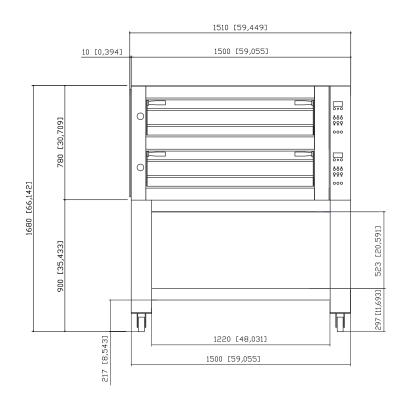

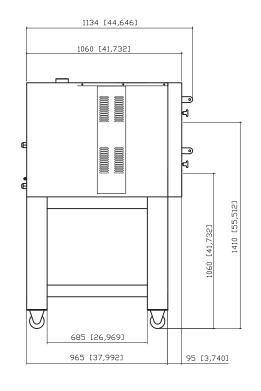


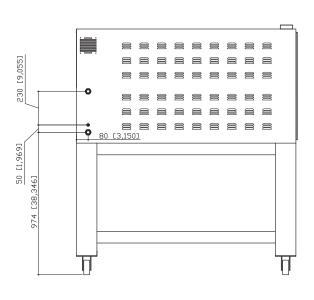


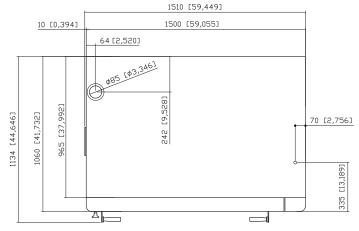





Donatello DN 635L oven technical data | triple

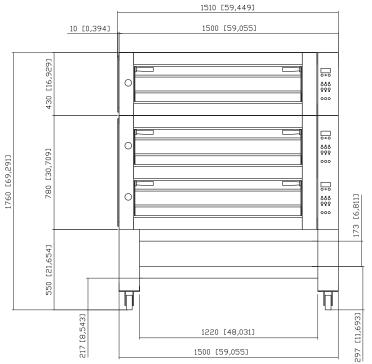


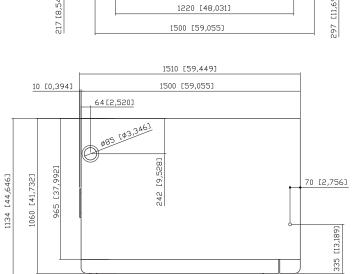


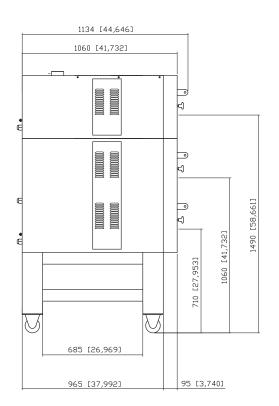

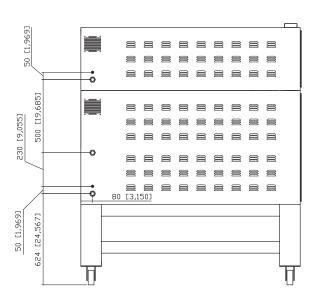

Donatello DN 635L oven technical data | capacity

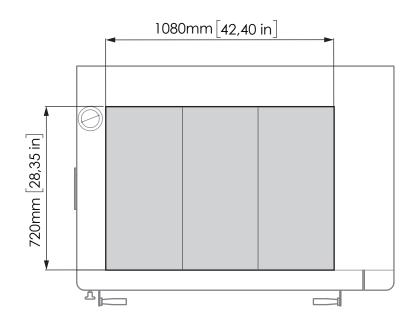

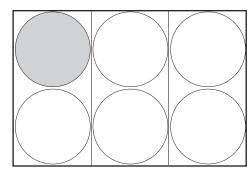

PIZZA **Ø 35 cm** [Ø 13.78 in.]

PIZZA **Ø 50 cm** [Ø 19,69 in.]


	Ø PIZZAS	PRODUCTIVITY PER HOUR	BATCHES
0	Ø 35 cm [Ø 13.78 in.]	60-66 pizzas	10-11
	Ø 50 cm [Ø 19.69 in.]	20-22 pizzas	10-11
	60x40 cm [23,62x15,75 in.]	10-12 pizzas	5-6

chamber height: 140 mm [5,51 in.]


TRY **60x40 cm** [23,62x15,75 in.]


ALIGNMENT OF THE OVEN WITH THE SUPPORT


If the Donatello oven is to be placed on a support, make the oven rear corners match the rear corners of the support.

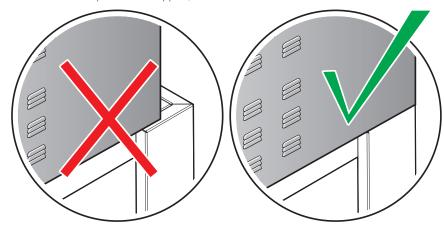



Donatello DN 935 oven technical data | single

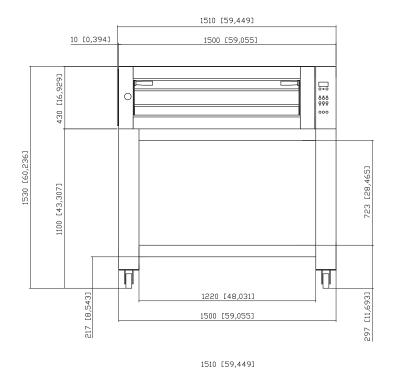

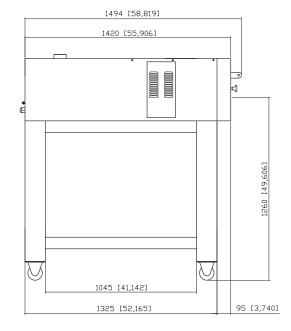


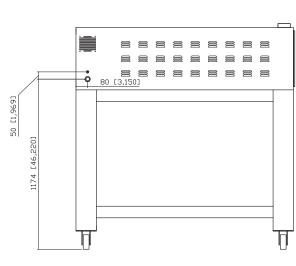


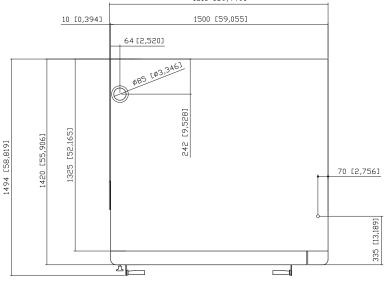


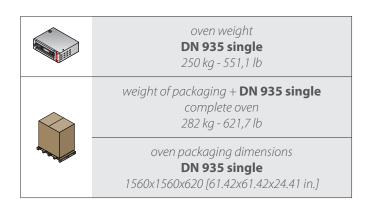



Donatello DN 935 oven technical data | double

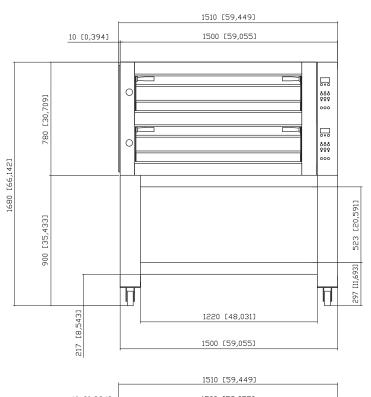

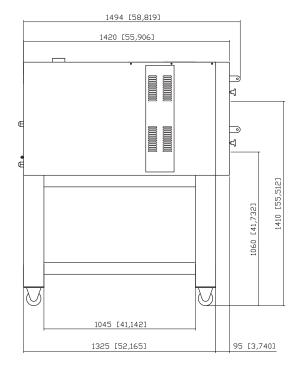


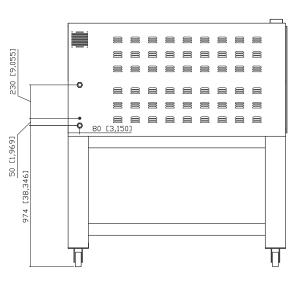


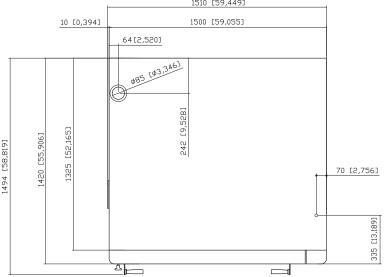


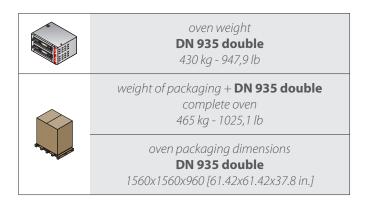


Donatello DN 935 | oven technical data | triple

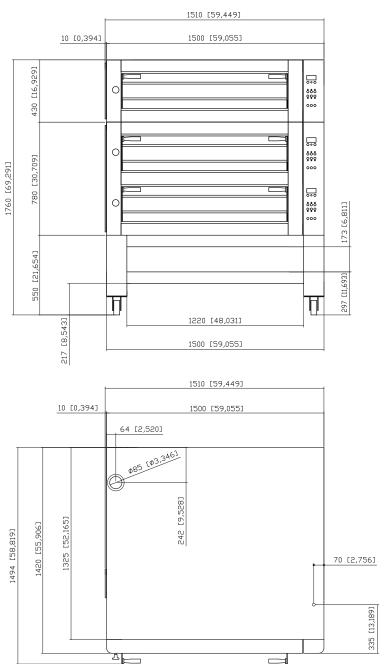


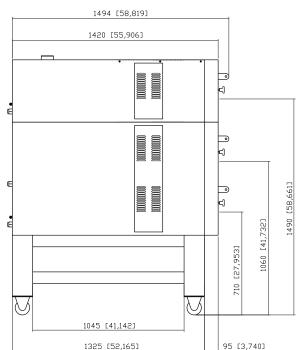


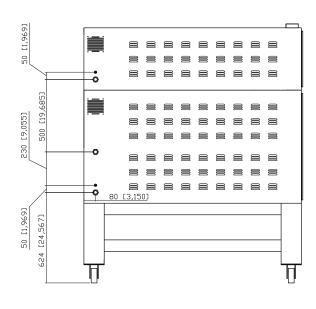


Donatello DN 935 oven technical data | capacity

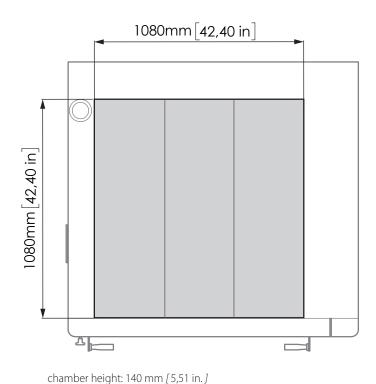

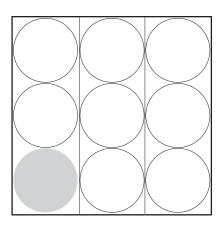

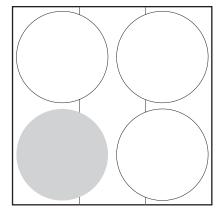

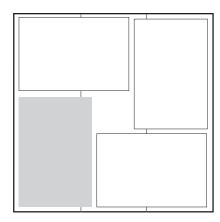

PIZZA **Ø 35 cm** [Ø 13.78 in.]


PIZZA **Ø 50 cm** [Ø 19,69 in.]

BAKING-TIN **60x40 cm** [23,62x15,75 in.]

Ø PIZZAS	PRODUCTIVITY PER HOUR	BATCHES
Ø 35 cm [Ø 13.78 in.]	90-99 pizzas	10-11
Ø 50 cm [Ø 19.69 in.]	40-44 pizzas	10-11
60x40 cm [23,62x15,75 in.]	20-24 pizzas	5-6

ALIGNMENT OF THE OVEN WITH THE SUPPORT

If the Donatello oven is to be placed on a support, make the oven rear corners match the rear corners of the support.

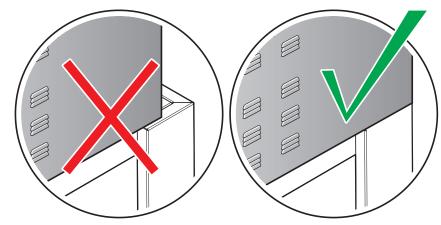

3 INSTALLATION

Safety instructions

- Read this guide carefully before installing the appliance, and keep it with care in an accessible place for any future consultation by the various operators.
- Moreover, the manual must always accompany the product through its life, even in case of transfer.
- Before any movement or installation, check that the room is suitable and systems comply with the installation country standards and the specifications indicated on the appliance rating plate.
- All installation, assembly and non-routine maintenance operations must be performed exclusively by qualified technicians that are authorised by the Manufacturer, in compliance with the regulations in force in the user country, and with the regulations on systems and work safety.
- These appliances are intended to be used for commercial applications, for example in restaurant kitchens, canteens, hospitals and commercial companies such as bakeries, butcher shops, etc., but not for the continuous and mass production of food. A use other than the stated one is considered improper, potentially dangerous for people and animals and might permanently damage the appliance. The improper use of the equipment shall void the warranty

- Before performing any maintenance, replacing components or carrying out any routine/ extraordinary cleaning, disconnect the electricity supply.
- Unauthorised actions, tampering or modifications that do not follow the information provided in this manual can cause damages, injuries or fatal accidents and null and void the warranty.
- It is forbidden to install the oven in environments at risk of explosion.
- Installation or maintenance that fails to comply with the instructions in this manual may cause damage, injury or fatal accidents.
- Persons not involved with the appliance installation may not pass through or stand in the work area during appliance assembly.
- The serial plate provides important technical information. This is vital in case of a request for maintenance or repair of the equipment: please do not remove, damage or modify it.
- Failure to follow these regulations may cause damage or even fatal injury, subsequently invalidating the guarantee and relieving the Manufacturer of all liability.

Symbols used in the manual and on the labels applied to the machine



Indicates that caution is required when performing an operation described in a paragraph that bears this symbol. The symbol also indicates that maximum operator awareness is required in order to avoid unwanted or dangerous consequences



Reference to another chapter where the subject is dealt with in more detail.



Manufacturer's tip



Indicates that the surfaces marked with this symbol may be hot and must therefore be touched carefully



Dangerous voltage



The symbol identifies the terminals which, connected to each other, carry the various parts of a device or system to the same potential (not necessarily the earth potential)



Indicates that it is necessary to read carefully the paragraph marked with this symbol before installing, using and maintaining the equipment

The company cannot be held liable for any print or transcription errors, reserving the right to make changes where deemed suitable without prior notice.

Partial reproduction without the Manufacturer's consent is prohibited. Measurements are purely indicative and not binding.

The original language used to prepare this manual is English: the Manufacturer is not responsible for any translation/interpretation or print errors.

Transport

Fig. 5

Fitted with personal protection equipment, transport the appliance to the installation location.

Use a suitable vehicle capable of withstanding the weight of the same.

Model	single	double	Model	single	double
DN435	147 kg - 324 lb	252 kg - 555,5 lb	DN635L	190 kg - 418,8 lb	324 kg - 714,2 lb
DN635	187 kg - 412,2 lb	330 kg - 727,5 lb	DN935	250 kg - 551,1 lb	430 kg - 948 lb

Persons not involved with the appliance installation may not pass through or stand in the work area during the transport of the appliance.

During the transport, pay particular attention to passing through openings and/or doors.

Preliminary operations

Fig. 6

Carefully remove the protective film.

If any glue residue is left on the surfaces, remove it with soapy water but without any corrosive or abrasive products or sharp or pointed instruments.



Check that all the parts making up the oven are in good condition and without any faults or breakages, if that is not the case, contact the Retailer for the procedures to follow.

Packaging disposal


before starting to install the oven, dispose of the packaging in accordance with the regulations in force in the country of installation.





Caution, suffocation hazard! If left unattended, packaging could be potentially dangerous for both children and animals.



Caution, hindrance hazard! If left unattended, packaging could hinder vehicles and installers during assembly operations.

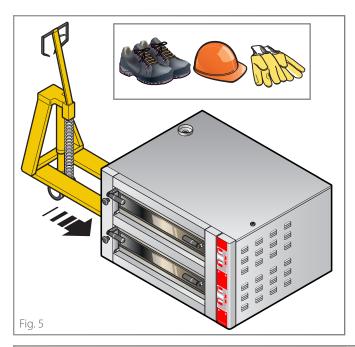

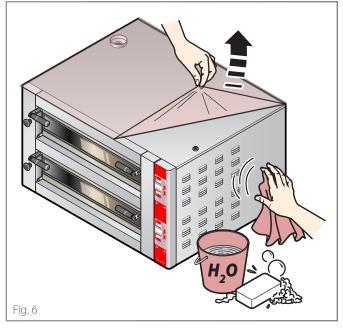

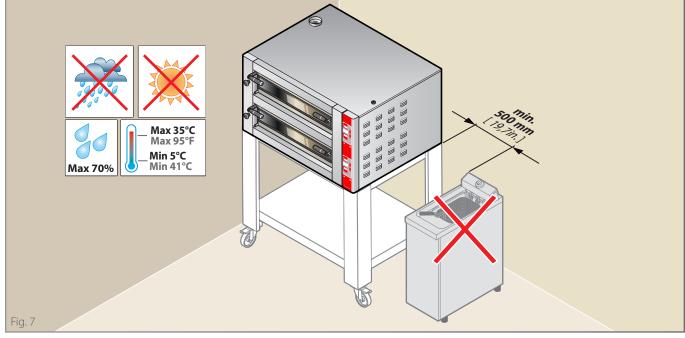

Positioning

Fig. 8

The positioning room must comply with the instructions provided on page <u>4</u> and <u>5</u>. Comply with the measurements shown in the figure.


Fig. 9


The oven must be placed on a base, built by the Manufacturer or by yourself that:

- is flame and heat resistant;
- is perfectly stable and level;
- withstands the weight of the appliance.

Model	single	double	Model	single	double
DN435	147 kg - 324 lb	252 kg - 555,5 lb	DN635L	190 kg - 418,8 lb	324 kg - 714,2 lb
DN635	187 kg - 412,2 lb	330 kg - 727,5 lb	DN935	250 kg - 551,1 lb	430 kg - 948 lb

In both cases, silicone the gap between the oven and the support or the bearing surface, using high temperature resistant silicone.

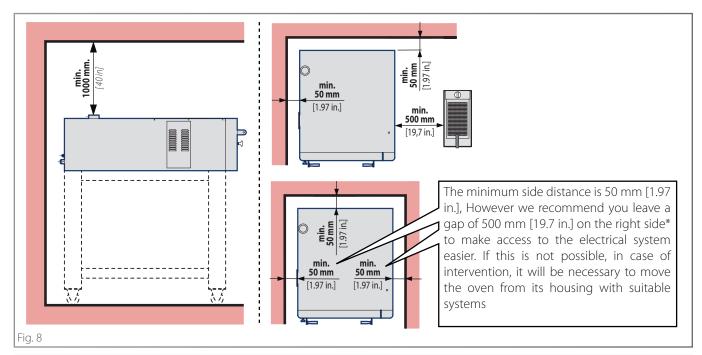

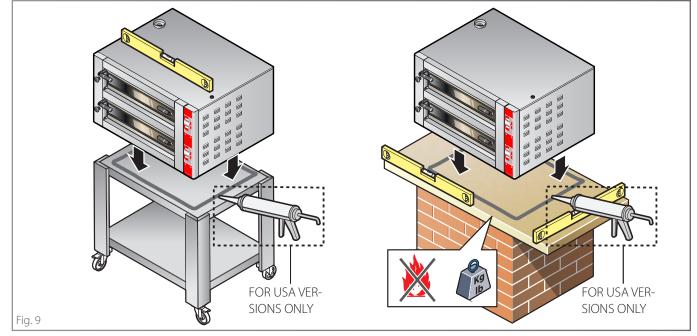

Serial number plate reading

The serial number is on the right hand side of the appliance. It provides important technical information that is vital in case of a request for maintenance or repair of the appliance: please do not remove, damage or modify it.


Smoke extraction


Fig. 11

The oven is fitted with an adjustable exhaust in the top to get rid of the steam from the cooking chamber.

This steam, together with the one from the door during the work phases, **must be conveyed outside** in one of the following ways:

- through a **hood supplied by the Manufacturer** that ensures perfect compatibility with the oven. For correct assembly and fixing to the oven, see the sheet attached to it; the evacuation flue must be for the exclusive use of the appliance, comply with current regulations and have a diameter that allows the passage of a **150 mm** [Ø5,91 in.] evacuation pipe which corresponds to the diameter of the tube to be mounted on the hood (not supplied).
- tthrough a **hood supplied by the user**, of suitable capacity, placed at minimum 300 mm [11.81in] from the oven:
- through an adequate **extraction system** supplied by the user: in this case a draught switch must be installed between the extractor and the oven chimney (the extractor and switch are not supplied by the Manufacturer). In this type of installation, the fumes resulting from the opening of the door will not be extracted.

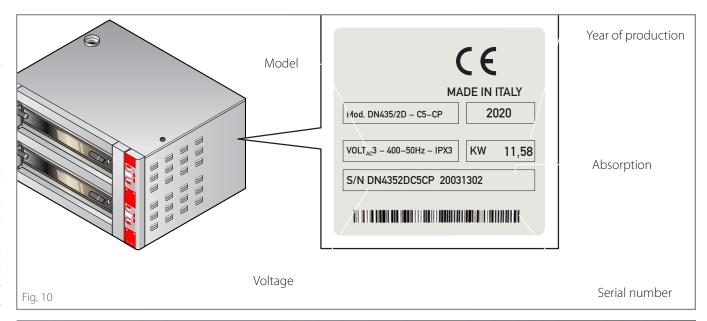

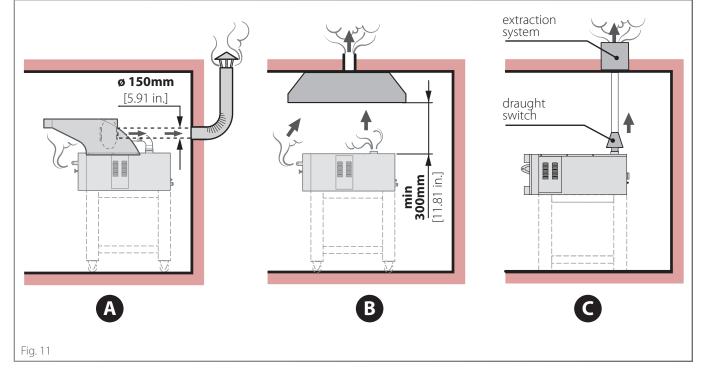

Electrical connection

Fig. 12




The electrical connection must be carried out **exclusively** by qualified personnel after reading the safety warnings at the beginning of the manual.



Before installing the appliance, **check that systems comply with the regulations in force** in the country where it is going to be used and **with the specifica-**

tions indicated on the appliance rating plate on the RH side of the oven.

The appliance is supplied without either power cable or plug: they must both be fitted by qualified personnel. The cable must be only **of the type stated** and the plug fitted to it must be suitable for the consumption and connection of the oven to the electrical mains.

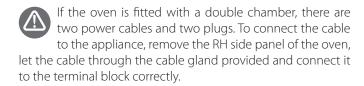




The following pages show the electrical diagrams: please refer to the one of the specific model to connect.

For a correct electrical connection, the appliance must:

- be included in an **equipotential system** in compliance with the legislation in force. This connection must be made between the various devices with the terminal marked with the equipotential symbol . The cable must have a maximum cross-section of 10 mm2 (in compliance with IEC EN 60335-2-42:2003-09) and must be yellow-green;
- must be **grounded** to the mains (green-yellow wire);
- must be connected to a **thermal differential switch** in compliance with the regulations in force (0.03A A type);

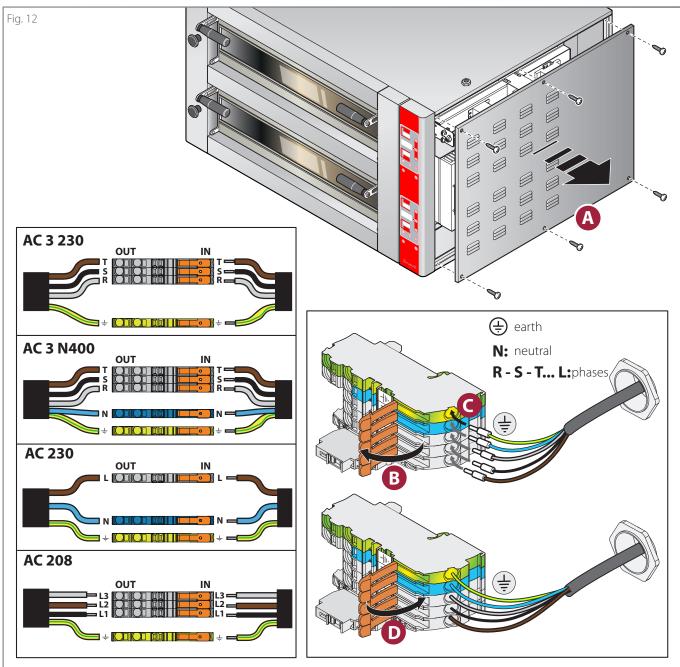



 must be connected to an omnipolar circuit breaker allowing complete disconnection in overvoltage III category conditions.

The Manufacturer accepts no liability for failure to comply with the above.





If required, the cable can be replaced by the Dealer or its technical service or by a person with similar qualifications to prevent any risk.

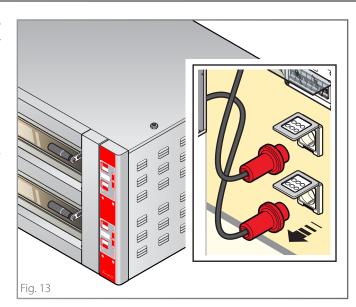


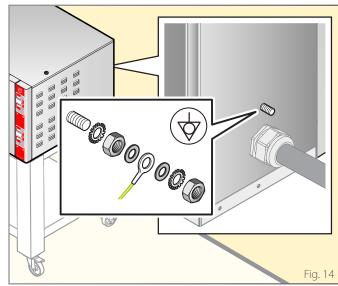



Oven type	Supply V	Power kW	Average consumption kWh	Absorption A	Cable type	Customer panel prot. nxA	
	single-phase 230V			25.2	H07RN-F 3G4	2x32	
435	three-phase 400V	5.8	3.5	8.4	H07RN-F 5G1	4x16	
433	three-phase 230V			14.6	H07RN-F 4G1,5	3x16	
	three-phase 208V	5.8	3.5	16.1	15/4 SOOW CABLE	3x16	
	three-phase 400V	8.4	0.4	5.0	12.1	H07RN-F 5G1,5	4x16
635	three-phase 230V		5.0	21.1	H07RN-F 4G2,5	3x25	
	three-phase 208V	8.5	5.1	23.6	13/4 SOOW CABLE	3x25	
	three-phase 400V	0.6	0.6	12.4	H07RN-F 5G1,5	4x16	
635L	three-phase 230V	8.6	5.2	21.6	H07RN-F 4G2,5	3x25	
	three-phase 208V	8.6	5.2	23.9	13/4 SOOW CABLE	3x25	
	three-phase 400V	12.6	7.6	18.2	H07RN-F 5G2,5	4x20	
935	three-phase 230V	12.6	7.6	31.6	H07RN-F 4G4	3x32	
	three-phase 208V	12.8	7.7	35.5	9/4 SOOW CABLE	3x40	

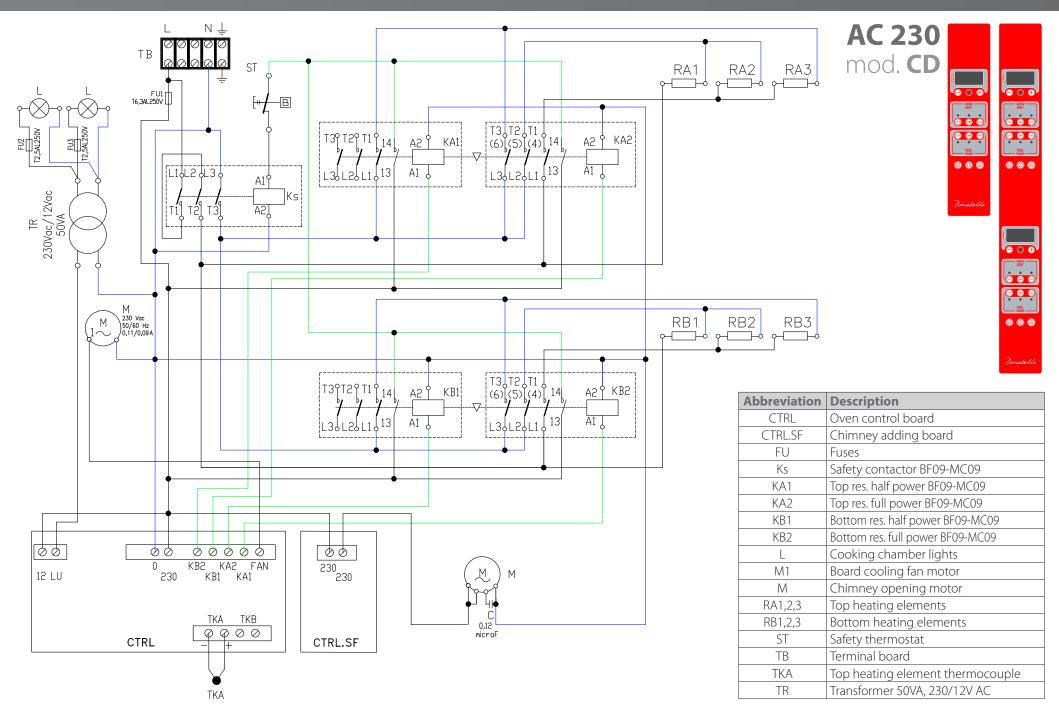

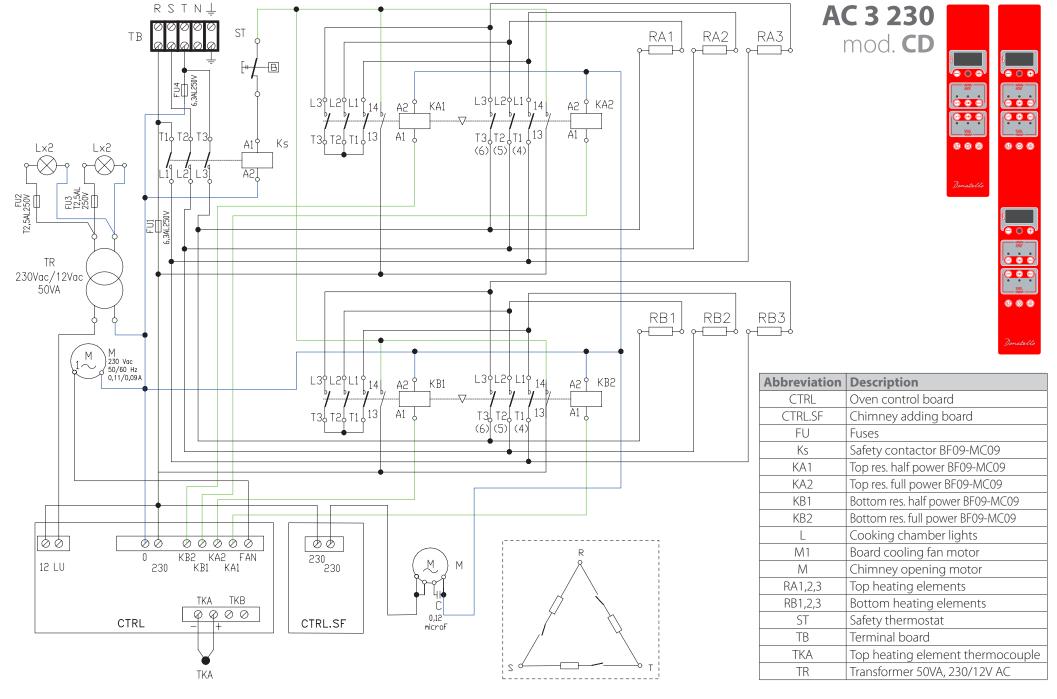


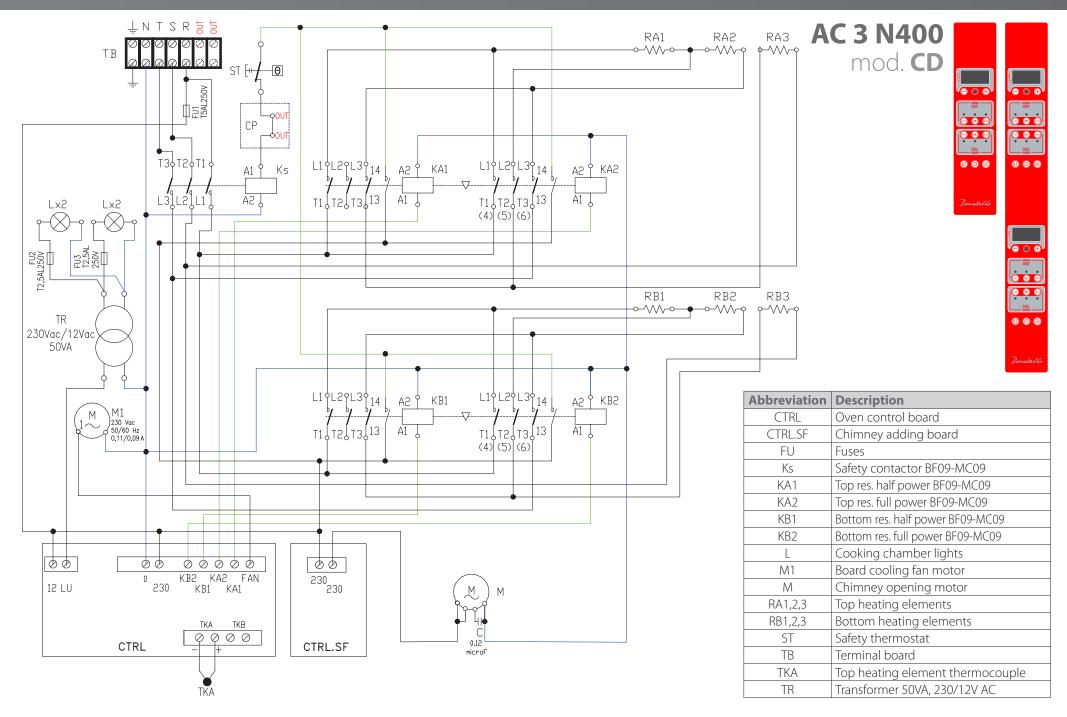


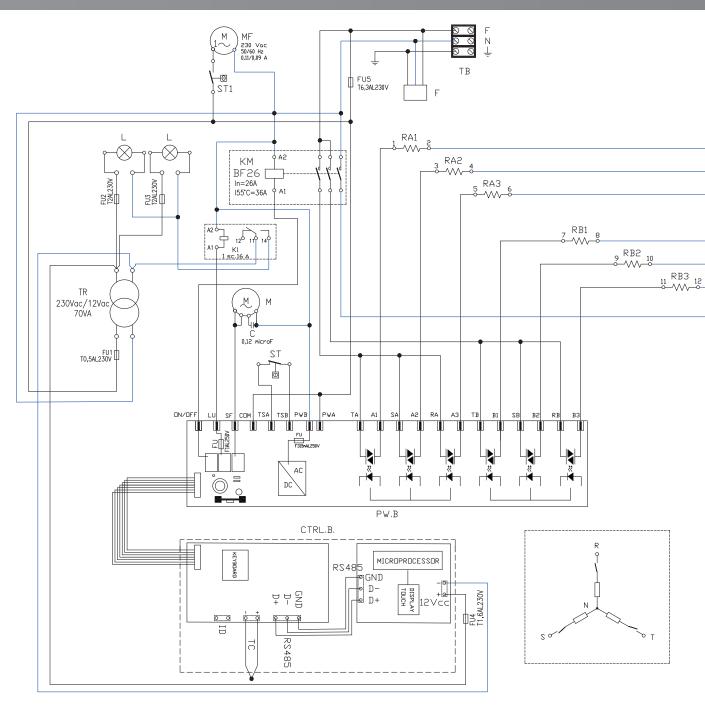

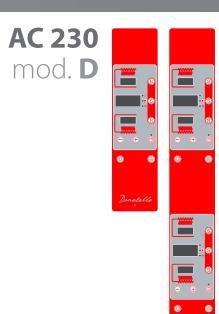


Abbreviation	Description
CTRL.B	Oven control board
С	Motor start capacitor
F	Noise filter
FU	Fuses
ID	Digital input for remote ignition
KM	Contactor BF09-MC09
L	Cooking chamber lights
M1	Board cooling fan motor
М	Chimney opening motor
PW.B	Power board
RA1,2,3	Top heating elements
RB1,2,3	Bottom heating elements
ST	Safety thermostat
ST1	Klixon cooling fan
TB	Terminal board
TC	Thermocouple
TR	Light transformer 50VA, 230/12Vac
TR1	Transformer 20VA, 230/12Vac

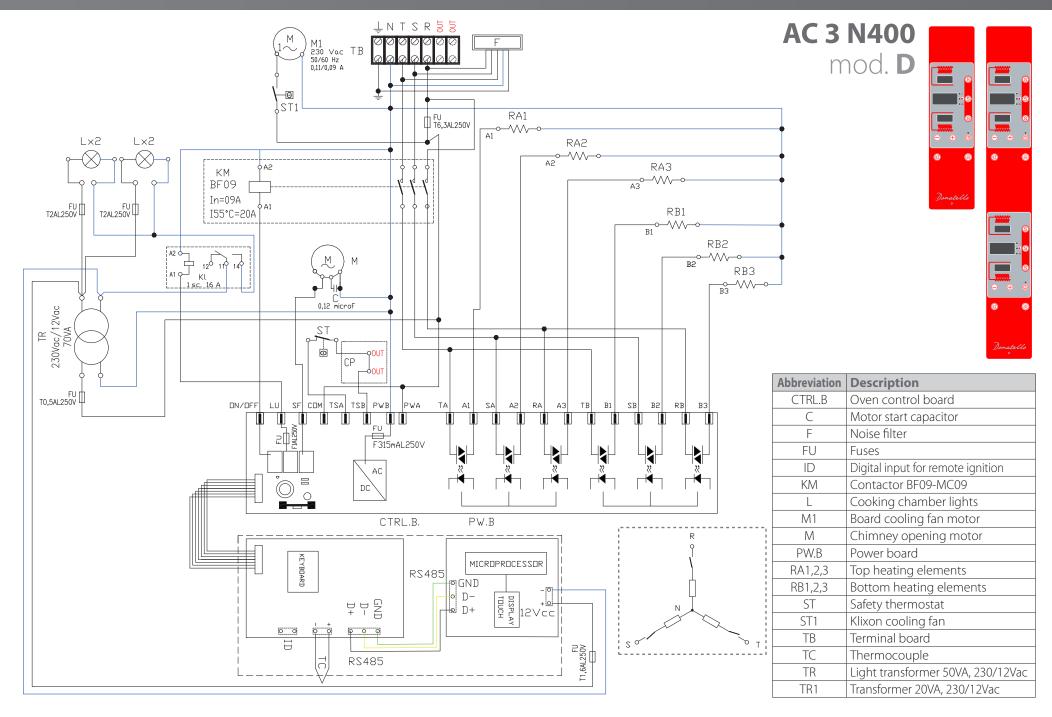


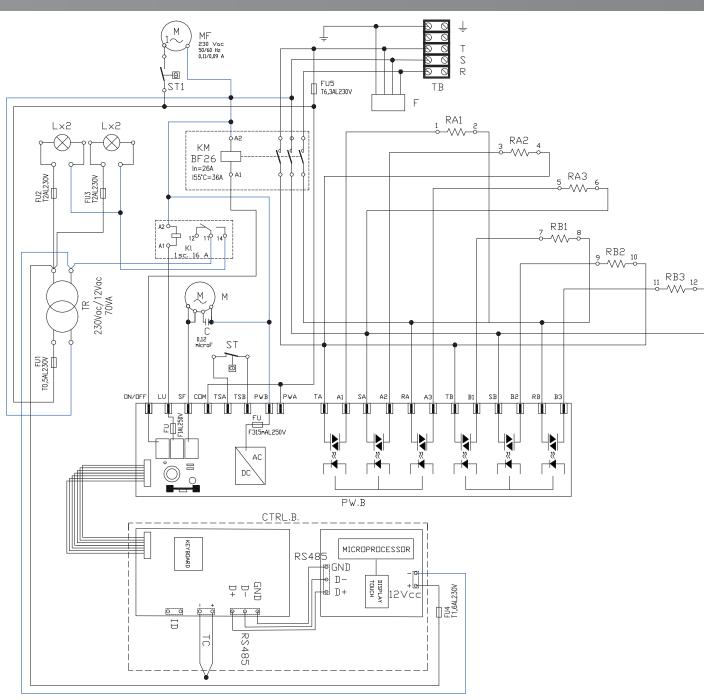

AC 3 230 mod. **D**

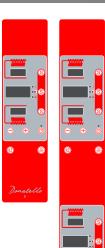

Abbreviation	Description
CTRL	Oven control board
CTRL.SF	Chimney adding board
FU	Fuses
Ks	Safety contactor BF09-MC09
KA1	Top res. half power BF09-MC09
KA2	Top res. full power BF09-MC09
KB1	Bottom res. half power BF09-MC09
KB2	Bottom res. full power BF09-MC09
L	Cooking chamber lights
M1	Board cooling fan motor
М	Chimney opening motor
RA1,2,3	Top heating elements
RB1,2,3	Bottom heating elements
ST	Safety thermostat
TB	Terminal board
TKA	Top heating element thermocouple
TR	Transformer 50VA, 230/12V AC

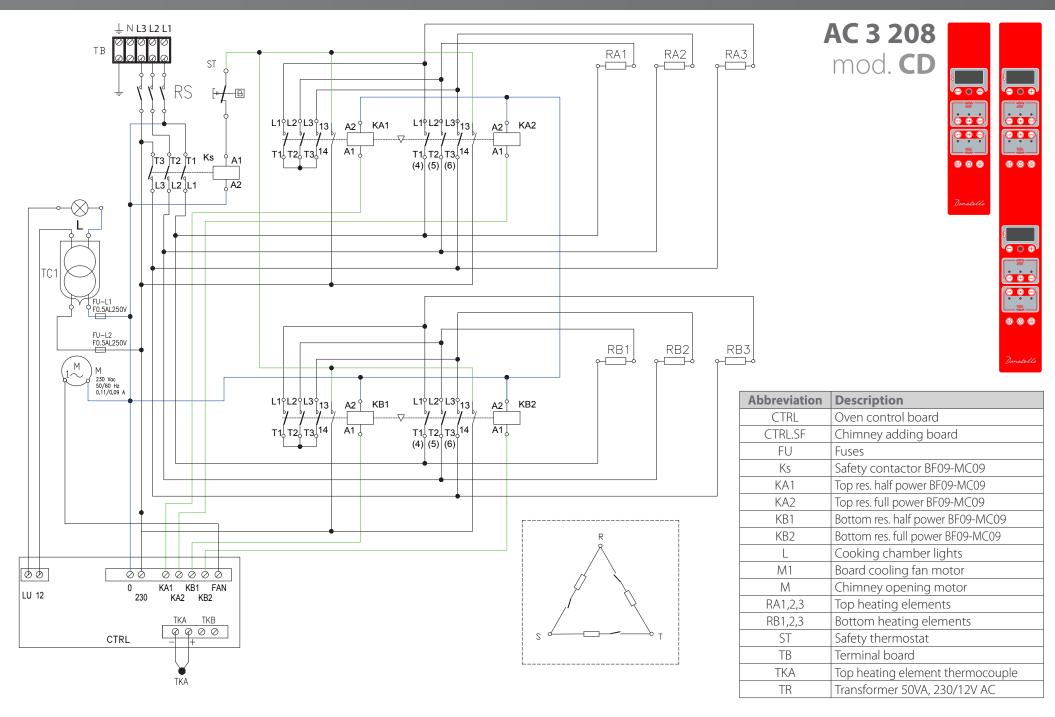

Pre-testing and final inspection

The oven is checked and tested in the Manufacturer's plant before being delivered to the customer.

The "production process check sheet" enclosed with it guarantees that **each** step in the production process, from assembly to packaging, was carefully checked from both the operating and safety standpoints.

After installing the appliance, check and mark with a " $\sqrt{}$ " all the boxes of the table on the side: this will confirm the installation is complete and correct.

Finish off explaining to the user how to use the appliance in an optimal and safe way and how to carry out ordinary maintenance and cleaning.

Checking the operation and first start-up

Start the appliance following the instructions in the "Use and Maintenance" manual annexed: monitor it during the whole test and check that all the electrical components work properly.

On the first use, we recommend you set the temperature at a value of **150°C - 302°F** for model "**D**" top percentage 80% bottom 20%, for model "**CD**" set Max at the top and Min at the bottom, **for at least 8 hours, without any food inside.** During this time, keep the bleed valve open. If a hood is fitted, we recommend it is kept ON. In this first phase, because of the humidity evaporating from the insulating materials, the oven will give out unpleasant smells and fumes that will gradually disappear during the following operating cycles.

√	Positioning checks	Reference chapter on page	
	Is the installation room adequate and compliant with regulations? (correct ventilation, maximum/minimum temperature, etc.)	Positioning on page 25	
	Is the appliance perfectly level?		
	Is the appliance resting on the base underneath and is this suitable to support the weight of the oven?		
	Have the minimum distances stated been complied with?		
	Has the protective film been removed from the surfaces?	Preliminary operations on page 24	
	Is the oven chamber free from non-compliant objects (e.g. Installation tools, user manuals, packaging, etc.)? If so, remove them!		
	Is the current chimney flue adequate and does it complies with the current regulations?	Smoke extraction on page 26	
√	Electrical checks	Reference chapter	
V	Erectifical circuity	Reference chapter	
V	Does the mains voltage match the data on the rating plate?	Reference chapter	
V		Electrical connection on page 27	
√ √	Does the mains voltage match the data on the rating plate? Do electric connections meet current regulations in the country of installation	·	
	Does the mains voltage match the data on the rating plate? Do electric connections meet current regulations in the country of installation and follow the diagrams supplied?	Electrical connection on page 27	
	Does the mains voltage match the data on the rating plate? Do electric connections meet current regulations in the country of installation and follow the diagrams supplied? Smoke outlet checks Is the appliance positioned correctly under a suitable hood? We would like to remind you that it is possible to connect the smoke outlet to an extractor (fan or extraction pipe of a motor-driven hood), putting in between	Electrical connection on page 27 Reference chapter	
√	Does the mains voltage match the data on the rating plate? Do electric connections meet current regulations in the country of installation and follow the diagrams supplied? Smoke outlet checks Is the appliance positioned correctly under a suitable hood? We would like to remind you that it is possible to connect the smoke outlet to an extractor (fan or extraction pipe of a motor-driven hood), putting in between the latter and the oven chimney a switch.	Reference chapter Smoke extraction on page 26	

The company cannot be held liable for any print or transcription errors, reserving the right to make changes where deemed suitable without prior notice. Partial reproduction without the manufacturer's consent is prohibited. Measurements are purely indicative and not binding.

The original language used to prepare this manual is English: the Manufacturer is not responsible for any translation/interpretation or print errors.

Diagnostics

In case of any faults or malfunctioning, the **display** of the **A (mod. CD)** or **B (mod. D)** boards can show the following error - alarm messages:

Error messages - alarms for mod. CD

Displayed code	Oven behaviour	Solution
Err	The heater thermocouple is disconnected or faulty	
rEF	The board and cold coupling temperature probe is faulty	Contact
ALL	Control card high temperature pre-alarm, exceeding parameter 06	Technical Service
ntc	Control card high temperature alarm.	Sei vice

NOTE:

"Err" - "ntc" the machine switches off




Error messages - alarms for mod. D

Displayed code	Oven behaviour	Solution
E1	The heater thermocouple is disconnected or faulty	
E2	The probe to measure the board temperature is faulty	Contact
E3	The probe to measure the cold coupling temperature is faulty	Technical
AL1	Power board high temperature pre-alarm, exceeding parameter 07	Service
AL2	Cold coupling high temperature pre-alarm, exceeding parameter 08	

NOTE:

"E" the machine switches off

"AL" the machine continues to operate.

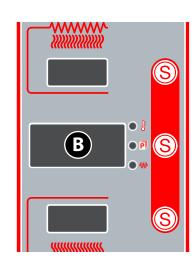

[&]quot;ALL" the machine continues to operate.

Notes		

